

AMP
RESEARCH[®]
Innovation in Motion



2017 ACCESSORIES CATALOG

AMERICAN DESIGN, ENGINEERING & MANUFACTURING:
POWERSTEP™ | POWERSTEP XL™ | POWERSTEP™ XTREME | POWERSTEP™ OVERRIDE SWITCH | ALLOY FUEL DOORS | BEDXTENDER HD™ | BEDSTEP® | BEDSTEP®2



**INVENTED,
ENGINEERED &
MANUFACTURED
IN AMERICA**

POWERSTEP XL™



Innovation in Motion

Contents


PowerStep™	p. 4-7
PowerStep XL™	p. 8
PowerStep™ XTreme	p. 9
PowerStep™ Override Switch	p. 10
Alloy Fuel Door	p. 11
BedXtender HD™ Max	p. 12-13
BedXtender HD™ Sport	p. 14-15
BedXtender HD™ Moto	p. 16-17
BedStep®	p. 18-19
BedStep 2™	p. 20-21
Nomenclature Guide	p. 22

POWERSTEP™

GETTING INTO YOUR TRUCK SHOULDN'T FEEL LIKE CLIMBING MOUNT EVEREST

That's why AMP Research invested in **POWERSTEP™**, the automatic, electric-powered running board that instantly extends when you open your door, and then hides itself safely out of sight when the doors close for improved ground clearance, aerodynamics and appearance. Its handsome design, all-weather performance and legendary reliability set the industry standard.

- Low-profile integrated led light system – standard
- High-strength, die-cast aluminum alloy components with an anodized and PTFE-coated, military-spec finish to resist corrosion
- Precision stainless steel pivot pins for rock-solid stability
- Maintenance-free, self-lubricating bushings for all-weather performance
- 5-year/60,000 mile warranty

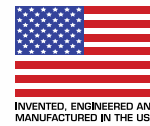

POWERSTEP™					
Years	Make	Model	Sub Detail	Notes	Part #
2002-2006	Cadillac	Escalade		(1)	75115-01A
2007-2014	Cadillac	Escalade			75125-01A
2015-2017	Cadillac	Escalade		Plug-N-Play System	76127-01A-B
2002-2006	Cadillac	Escalade ESV/EXT		(1)	75115-01A
2007-2014	Cadillac	Escalade ESV/EXT			75125-01A
2015-2017	Cadillac	Escalade ESV/EXT		Plug-N-Play System	76127-01A-B
2015-2017	Chevrolet	Suburban		Plug-N-Play System	76127-01A-B
2007-2013	Chevrolet	Avalanche			75125-01A
2015-2017	Chevrolet	Colorado		Plug-N-Play System	76153-01A
2007-2013	Chevrolet	Silverado 1500	Extended Cab		75126-01A
2007-2013	Chevrolet	Silverado 1500	Crew Cab		75126-01A
2014-2017	Chevrolet	Silverado 1500	Extended Cab		75154-01A
2014-2017	Chevrolet	Silverado 1500	Crew Cab		75154-01A
2014-2017	Chevrolet	Silverado 1500	Double Cab	Plug-N-Play System	76154-01A
2014-2017	Chevrolet	Silverado 1500	Crew Cab	Plug-N-Play System	76154-01A
1999-2006	Chevrolet	Silverado 1500/2500/3500	Extended Cab	Includes 2007 Classic	75113-01A
1999-2006	Chevrolet	Silverado 1500/2500/3500	Crew Cab	Includes 2007 Classic	75113-01A
2007-2014	Chevrolet	Silverado 2500/3500	Extended Cab	Excludes 2011-2017 Diesel Models	75126-01A
2007-2014	Chevrolet	Silverado 2500/3500	Crew Cab	Excludes 2011-2017 Diesel Models	75126-01A
2011-2014	Chevrolet	Silverado 2500/3500	Extended Cab	Fits Diesel Models Only	75146-01A
2011-2014	Chevrolet	Silverado 2500/3500	Crew Cab	Fits Diesel Models Only	75146-01A
2015-2017	Chevrolet	Silverado 2500/3500	Extended Cab	Excludes Diesel Models	75154-01A
2015-2017	Chevrolet	Silverado 2500/3500	Crew Cab	Excludes Diesel Models	75154-01A
2015-2017	Chevrolet	Silverado 2500/3500	Double Cab	Plug-N-Play System - Diesel Models Only	76147-01A
2015-2017	Chevrolet	Silverado 2500/3500	Crew Cab	Plug-N-Play System - Diesel Models Only	76147-01A
2015-2017	Chevrolet	Silverado 2500/3500	Double Cab	Plug-N-Play System - Gas Models Only	76154-01A
2015-2017	Chevrolet	Silverado 2500/3500	Crew Cab	Plug-N-Play System - Gas Models Only	76154-01A
2007-2014	Chevrolet	Suburban			75125-01A
2001-2006	Chevrolet	Tahoe		(1)	75115-01A
2007-2014	Chevrolet	Tahoe			75125-01A
2015-2017	Chevrolet	Tahoe		Plug-N-Play System	76127-01A-B
2001-2006	Chevrolet	Avalanche	Without Body Cladding		75115-01A
2001-2006	Chevrolet	Avalanche	With Body Cladding		75115-01A
2001-2006	Chevrolet	Suburban		(1)	75115-01A

Notes: (1) **DIODES REQUIRED.** Additional diodes required for 1999-2002 GM vehicles.
 (2) **DIODES REQUIRED.** Additional diodes required for Ford Super Duty 1999-2001 plus 2004-2007 Super Duty without remote keyless.



POWERSTEP™					
Years	Make	Model	Sub Detail	Notes	Part #
2002-2008	Dodge	Ram 1500	Quad Cab		75101-01A
2009-2015	Dodge	Ram 1500	All Cabs	Factory Air Ride Suspension Requires Air Tank Relocation Kit - Purchase Kit Before Installation - Not Compatible With Offset Collision Bracket On The Rebel, Sport, And Express Models	75138-01A
2016-2017	Dodge	Ram 1500/2500/3500	All Cabs	Plug-N-Play System	76139-01A
2006-2009	Dodge	Ram 1500/2500/3500	Mega Cab		75118-01A
2013-2015	Dodge	Ram 1500/2500/3500	All Cabs	Plug-N-Play System - Factory Air Ride Suspension Requires Air Tank Relocation Kit - Purchase Kit Before Installation.	76138-01A
2003-2009	Dodge	Ram 2500/3500	Quad Cab		75101-01A
2010-2016	Dodge	Ram 2500/3500	All Cabs	Not Compatible With Offset Collision Bracket On The Rebel, Sport, And Express Models	75138-01A
1999-2001	Ford	Excursion		Diode Kit May Be Required - Purchase Kit Before Installation - Requires Minor Cutting (2)	75104-01A
2001-2003	Ford	F-150	Supercrew	Includes 2004 Heritage	75111-01A
2004-2008	Ford	F-150	All Cabs	Standard Cab & Supercab Requires Minor Cutting	75105-01A
2009-2014	Ford	F-150	All Cabs		75141-01A
2009-2014	Ford	F-150	All Cabs	Plug-N-Play System	76141-01A
2015-2017	Ford	F-150	All Cabs	Plug-N-Play System	76151-01A
1999-2001	Ford	F-250/350/450	All Cabs	Diode Kit May Be Required - Purchase Kit Before Installation - Requires Minor Cutting (2)	75104-01A
2002-2016	Ford	F-250/350/450	All Cabs	F-250/350/450 Regular & Super Cab, 2002-3003/2008-2016 Requires Minor Cutting	75134-01A
2004-2007	Ford	F-250/350/450	All Cabs	Diode Kit May Be Required - Purchase Kit Before Installation - Requires Minor Cutting (2)	75104-01A
2017-2017	Ford	F-250/350/450		Plug-N-Play System	76235-01A
2014-2017	Ford	Transit			75159-01A
2008-2016	Ford	F-250/350/450	All Cabs	*Plug-N-Play System - Regular & Super Cab Requires Minor Cutting	76134-01A
2015-2017	GMC	Canyon		Plug-N-Play System	76153-01A
2007-2013	GMC	Sierra 1500	Extended Cab		75126-01A
2007-2013	GMC	Sierra 1500	Crew Cab		75126-01A
2014-2017	GMC	Sierra 1500	Extended Cab		75154-01A
2014-2017	GMC	Sierra 1500	Crew Cab		75154-01A
2014-2017	GMC	Sierra 1500	Double Cab	Plug-N-Play System	76154-01A
2014-2017	GMC	Sierra 1500	Crew Cab	Plug-N-Play System	76154-01A
1999-2006	GMC	Sierra 1500/2500/3500	Extended Cab	Includes 2007 Classic	75113-01A
1999-2006	GMC	Sierra 1500/2500/3500	Crew Cab	Includes 2007 Classic	75113-01A
2007-2014	GMC	Sierra 2500/3500	Extended Cab	Excludes 2011-2017 Diesel Models	75126-01A
2007-2014	GMC	Sierra 2500/3500	Crew Cab	Excludes 2011-2017 Diesel Models	75126-01A
2011-2014	GMC	Sierra 2500/3500	Extended Cab	Fits Diesel Models Only	75146-01A
2011-2014	GMC	Sierra 2500/3500	Crew Cab	Fits Diesel Models Only	75146-01A
2015-2017	GMC	Sierra 2500/3500	Extended Cab	Excludes Diesel Models	75154-01A
2015-2017	GMC	Sierra 2500/3500	Crew Cab	Excludes Diesel Models	75154-01A

Notes: (1) DIODES REQUIRED. Additional diodes required for 1999-2002 GM vehicles.

(2) DIODES REQUIRED. Additional diodes required for Ford Super Duty 1999-2001 plus 2004-2007 Super Duty without remote keyless.



POWERSTEP™					
Years	Make	Model	Sub Detail	Notes	Part #
2015-2017	GMC	Sierra 2500/3500	Double Cab	Plug-N-Play System - Diesel Models Only	76147-01A
2015-2017	GMC	Sierra 2500/3500	Crew Cab	Plug-N-Play System - Diesel Models Only	76147-01A
2015-2017	GMC	Sierra 2500/3500	Double Cab	Plug-N-Play System - Gas Models Only	76154-01A
2015-2017	GMC	Sierra 2500/3500	Crew Cab	Plug-N-Play System - Gas Models Only	76154-01A
2001-2006	GMC	Yukon		(1)	75115-01A
2007-2014	GMC	Yukon			75125-01A
2015-2017	GMC	Yukon		Plug-N-Play System	76127-01A-B
2000-2006	GMC	Yukon Denali		(1)	75115-01A
2001-2006	GMC	Yukon XL		(1)	75115-01A
2007-2014	GMC	Yukon XL			75125-01A
2015-2017	GMC	Yukon XL		Plug-N-Play System	76127-01A-B
2003-2009	Hummer	H2			75107-01A
2005-2010	Hummer	H3			75116-01A
2009-2010	Hummer	H3T			75116-01A
2004-2010	Infiniti	QX56		Requires Minor Cutting	75110-01A
2016-2017	Jeep	Grand Cherokee		Plug-N-Play System - Does Not Fit SRT, Summit, Or High Altitude Models	76330-01A
2007-2017	Jeep	Wrangler JK	2 Door	2 Door	75121-01A
2007-2017	Jeep	Wrangler JK	Unlimited	4 Door	75122-01A
2006-2008	Lincoln	Mark LT			75105-01A
2007-2017	Mercedes-Benz	Sprinter			75163-01A
2004-2015	Nissan	Armada		Requires Minor Cutting	75110-01A
2004-2015	Nissan	Titan	King Cab	Requires Minor Cutting	75110-01A
2004-2015	Nissan	Titan	Crew Cab		75110-01A
2010-2016	Toyota	4Runner		Excludes Limited With Cladding	75155-01A
2005-2017	Toyota	Tacoma	Double Cab		75142-01A
2016-2017	Toyota	Tacoma			75162-01A
2008-2016	Toyota	Sequoia		Requires Minor Cutting	75137-01A
2008-2016	Toyota	Sequoia		Plug-N-Play System - Requires Minor Cutting	76137-01A
2007-2017	Toyota	Tunda	Double Cab	Requires Minor Cutting	75137-01A
2007-2017	Toyota	Tunda	Crewmax		75137-01A
2007-2017	Toyota	Tunda	Double Cab	Plug-N-Play System - Requires Minor Cutting	76137-01A
2007-2017	Toyota	Tunda	Crewmax	Plug-N-Play System	76137-01A

Notes: (1) DIODES REQUIRED. Additional diodes required for 1999-2002 GM vehicles.

(2) DIODES REQUIRED. Additional diodes required for Ford Super Duty 1999-2001 plus 2004-2007 Super Duty without remote keyless.



EXTRAS AND OPTIONS

Description	Make	Model	Sub Detail	Notes	Part #
Air Tank Relocation Kit	Dodge	Ram 2500/3500	Crew Cab		10-79101-01A
Air Tank Relocation Kit	Dodge	Ram 2500/3500	Mega Cab		10-79102-01A
PowerStep™ 79" Trim Strip				Fits All Applications With New Style Extrusion - Call AMP Tech Support For Details - Will Not Fit 2011-2014 GM Diesel, H2, H3, Jeep, And Tacoma	75149-01A
PowerStep™ 79" Trim Strip - Full Kit Extrusions Included (Set Of 2)				Fits All Applications With Old Style Extrusion - Call AMP Tech Support For Details - Not Required For 2011-2014 GM Diesel - Will Not Fit H2, H3, Jeep, And Toyota Tacoma	75151-01A
PowerStep™ 85" Trim Strip	Chevrolet	Silverado	Diesel		75150-01A
PowerStep™ 85" Trim Strip	GMC	Sierra	Diesel		75150-01A
PowerStep™ Kit	All	All		PowerStep™ Led Light Kit - Fits All Applications With New Style Controller - Call AMP Tech Support 888-983-2206 For Part Verification	75131-01A
PowerStep™ Kit	Dodge	Ram		PowerStep™ Extension Arm Kit - Compatible With The Following Dodge Ram Trucks: Part # 75101, 75118, 75143 (Option)	75130-01A
PowerStep™ Kit	Ford	F-250/350/450		PowerStep™ Extension Arm Kit - Compatible With All Ford Super Duty Trucks: Part # 75104, 75134 (Option)	75130-01A
PowerStep™ Plug-N-Play Conversion Kit	Chevy	Silverado 1500		Converts Part # 75154-01A To Plug-N-Play Option	76400-01A
PowerStep™ Plug-N-Play Conversion Kit	Chevy	Silverado 2500/3500		Converts Part # 75154-01A To Plug-N-Play Option	76400-01A
PowerStep™ Plug-N-Play Conversion Kit	Dodge	Ram		Converts Part # 75138-01A To Plug-N-Play Option (Excludes 09-12 Model Year)	76402-01A
PowerStep™ Plug-N-Play Conversion Kit	Ford	F-150		Converts Part # 75141-01A To Plug-N-Play Option	76401-01A
PowerStep™ Plug-N-Play Conversion Kit	Ford	F-250/F350		Converts Part # 75134-01A To Plug-N-Play Option (Excludes 02-03 Model Year)	76403-01A
PowerStep™ Plug-N-Play Conversion Kit	GMC	Sierra 1500		Converts Part # 75154-01A To Plug-N-Play Option	76400-01A
PowerStep™ Plug-N-Play Conversion Kit	GMC	Sierra 2500/3500		Converts Part # 75154-01A To Plug-N-Play Option	76400-01A
PowerStep™ Plug-N-Play Pass Thru Harness	All	All		Plug-N-Play Pass Thru Harness - All Applicable Models	76404-01A

- Automatic power-deploying running boards
- Integrated LED light system
- Rail constructed of 6063 Marine grade aluminum
- Attractive and durable black textured finish
- Step, die-cast aluminum alloy components with an anodized and PTFE coated, military spec finish to resist corrosion
- Precision stainless steel pivot pins for rock solid stability
- Integrated bracket systems support up to 600 lbs.
- Maintenance-free, self-lubricating bushing for all-weather performance
- 5-year/60,00 mile warranty



POWERSTEP XL™

SPECIFICALLY DESIGNED FOR LIFTED TRUCKS - 3" ADDITIONAL DROP

Featuring a rugged, bold design, the new patent-pending **POWERSTEP XL™** offers a **3" LOWER STEPPING SURFACE** than the original PowerStep™ and makes accessing your *lifted* truck easier.

POWERSTEP XL™					
Years	Make	Model	Sub Detail	Notes	Part #
2014-2017	Chevrolet	Silverado 1500	Crew Cab	Plug-N-Play System - Gas Models Only	77154-01A
2015-2017	Chevrolet	Silverado 2500/3500	Crew Cab	Plug-N-Play System - Gas Models Only	77154-01A
2007-2013	Chevrolet	Silverado 1500	Crew Cab	Non Plug-N-Play System	77126-01A
2007-2014	Chevrolet	Silverado 2500/3500	Crew Cab	Non Plug-N-Play System	77126-01A
2009-2012	Dodge	Ram 1500	Crew Cab	Non Plug-N-Play System	77158-01A
2013-2015	Dodge	Ram 1500	Crew Cab	Plug-N-Play System	77138-01A
2013-2015	Dodge	Ram 1500/2500/3500	Mega Cab	Plug-N-Play System	77148-01A
2010-2012	Dodge	Ram 2500/3500	Mega Cab	Non Plug-N-Play System	77168-01A
2004-2008	Ford	F-150	All Cabs	Non Plug-N-Play System - Requires Minor Cutting On Regular And Supercab	77105-01A
2015-2017	Ford	F-150	Supercrew	Plug-N-Play System	77151-01A
2009-2014	Ford	F-150	Supercrew	Plug-N-Play System	77141-01A
2017-2017	Ford	F-250/350/450	Supercrew	Plug-N-Play System	77234-01A
2008-2016	Ford	F-250/350/450	Supercrew	Plug-N-Play System - F-250/350/450 Crew Cab, 2008-2010 / 2013-2015 - Does Not Currently Work On 2011-2012	77134-01A
2004-2007	Ford	F-250/350/450	Supercrew	Plug-N-Play System	77104-01A
2014-2017	GMC	Sierra 1500	Crew Cab	Plug-N-Play System - Gas Models Only	77154-01A
2015-2017	GMC	Sierra 2500/3500	Crew Cab	Plug-N-Play System - Gas Models Only	77154-01A
2007-2013	GMC	Sierra 1500	Crew Cab	Non Plug-N-Play System - Excludes 2011-2014 Diesel	77126-01A
2007-2014	GMC	Sierra 2500/3500	Crew Cab	Non Plug-N-Play System - Excludes 2011-2014 Diesel	77126-01A
2007-2017	Toyota	Tundra	Double Cab	Plug-N-Play System - Requires Minor Cutting On Double Cab	76137-01A
2007-2017	Toyota	Tundra	Crewmax	Plug-N-Play System	76137-01A

POWERSTEP™ XTREME

FOR EXTREME CONDITIONS

FOR THOSE OWNERS WHO LIVE AND WORK IN CHALLENGING ENVIRONMENTS

AMP Research® **POWERSTEP™ XTREME** – made specifically for extreme environments. Sub-zero winters, mud caked rockers; AMP Research PowerStep™ XTreme is designed to hold up to the extreme.


- Dual motors drive this electric-powered running board to deliver more power when deploying and retracting
- LED lights illuminate boards when deployed
- Aggressive design for extreme traction, all-weather performance made from high-strength, die-cast aluminum components
- Legendary reliability with durable, high-texture powder-coated finish to resist corrosion and maximize grip
- OEM-quality motors, drive system and wiring harness that sets the industry standard
- 5-year/60,000 mile warranty



TRUCK XTREME



JEEP XTREME

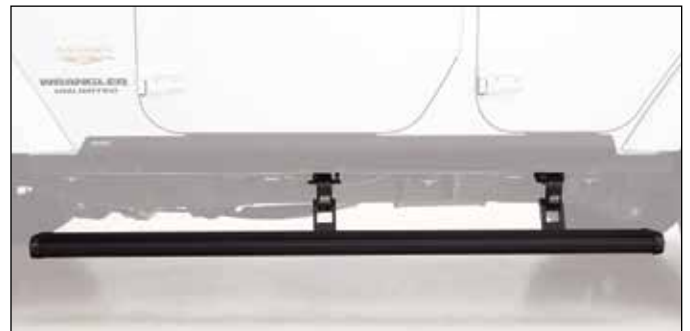

POWERSTEP™ XTREME					
Years	Make	Model	Sub Detail	Notes	Part #
2014-2017	Chevrolet	Silverado 1500	Extended/Crew Cab		78154-01A
2015-2017	Chevrolet	Silverado 2500/3500	Extended/Crew Cab	Gas	78154-01A
2013-2017	Dodge	Ram 1500	All Cabs		78139-01A
2017	Ford	SD	All Cabs		78235-01A
2015-2017	Ford	F-150	All Cabs		78151-01A
2008-2016	Ford	F-250/350/450	All Cabs		78134-01A
2014-2017	GMC	Sierra 1500	Extended/Crew Cab		78154-01A
2015-2017	GMC	Sierra 2500/3500	Extended/Crew Cab	Gas	78154-01A
2007-2017	Jeep	Wrangler	2-door		78121-01A
2007-2017	Jeep	Wrangler	4-door		78122-01A

POWERSTEP™ OVERRIDE SWITCH

TAKE CONTROL OF YOUR POWERSTEP™

Now you can manually control your AMP Research PowerStep™ with an over-ride switch. Whether deploying them to wash, or retracting them for off-roading, the switch gives you the flexibility you want in a PowerStep™.

- Allows the PowerStep™, PowerStep XL™, and PowerStep™ XTreme to be manually raised or lowered
- The toggle switch can be easily installed on the dash, and is wired directly to the PowerStep™ controller



Override Retract (Up)...
keeps the steps up and out of the way, regardless of what you do with the doors.



Automatic Mode (Middle)...
steps are activated by the doors, deploying when the doors are opened, retracting when they're closed.



Override Deploy (Down)...
keeps the steps down and ready for use, regardless of what you do with the doors.

POWERSTEP™ OVERRIDE SWITCH

Part	Description
79105-01A	Override Switch with STA1 Controller – fits all excluding 75141-01A & 75134-01A
79107-01A	Override Switch with STB1 Controller – fits only 75141-01A & 75134-01A
79106-01A	Override Switch without Controller – to be used on new steps with new controller




ALLOY FUEL DOOR

JEEP WRANGLER JK ALUMINUM ALLOY

Made from die-cast aluminum alloy, this fuel door cover features expressive styling that compliments the body lines. A patented, cam-action hinge ensures no rattling when driving on rough roads or off pavement.

- Durable die-cast aluminum housing
- Corrosion-resistant construction
- No-rattle, cam-action hinge
- Two finishes available: powder-coated black and brushed aluminum
- Easy no-drill installation
- 3-year limited warranty

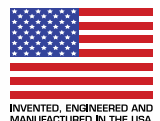

ALLOY FUEL DOOR						
Years	Make	Model	Sub Detail	Notes	Brushed Part #	Black Part #
2007-2017	Jeep	Wrangler JK		2 Door And 4 Door Unlimited	73000-00A	73000-01A

BEDXTENDER HD™ MAX

CLASSIC U-SHAPE DESIGN FOR MAXIMUM CARGO CAPACITY.

Flip it out with the tailgate open to gain up to 2-feet of enclosed cargo area. Flip it inside and close the tailgate to keep tools and smaller cargo contained in the truck bed.



- Lightweight, super strong 6063 T6 aluminum alloy tubes
- Rugged glass-reinforced nylon composite uprights
- Instantly adds up to 2-feet of length to your truck bed


- Durable black or silver powder-coat finish
- Easy to install and easy to remove
- 3-year/36,000 mile warranty

BEDXTENDER HD™ MAX						
Years	Make	Model	Sub Detail	Notes	Silver Part #	Black Part #
2015-2017	Chevrolet	Colorado			74817-00A	74817-001A
2007-2017	Chevrolet	Silverado	Standard Bed		74815-00A	74815-001A
1982-2017	Dodge	RAM	Standard Bed	Dually Requires Kit Part # 74610-01A	74814-00A	74814-001A
2004-2017	Ford	F-150	Standard Bed	Excludes 2004 Heritage	74813-00A	74813-001A
1997-2003	Ford	F-150	Standard Bed	Excludes Super Crew, Includes 2004 Heritage	74814-00A	74814-001A
1999-2017	Ford	F-250/350	Standard Bed		74814-00A	74814-001A
2011-2014	Ford	Ranger			74824-00A	74824-001A
2015-2017	GMC	Canyon			74817-00A	74817-001A
2007-2017	GMC	Sierra	Standard Bed		74815-00A	74815-001A
2005-2008	Lincoln	Mark LT	Standard Bed		74813-00A	74813-001A
1998-2017	Nissan	Frontier	Standard Bed	Requires Part # 74601-01A For Installation	74811-00A	74811-001A
1998-2014	Nissan	Navara			74823-00A	74823-001A
2004-2017	Nissan	Titan	Standard Bed		74814-00A	74814-001A
2005-2017	Toyota	Tacoma			74811-00A	74811-001A
2007-2017	Toyota	Tundra			74813-00A	74813-001A
2000-2006	Toyota	Tundra			74811-00A	74811-001A
2009-2014	Volkswagen	Amarok			74822-00A	74822-001A

EXTRAS AND OPTIONS						
Years	Make	Model	Notes	Part #		
1998-2017	Nissan	Frontier	L Bracket Kit	74601-01A		
2014-2017	Ram	Dually	Bracket Kit	74610-01A		
1984-2004	Toyota	All	L Bracket Kit	74601-01A		
1993-1998	Toyota	T-100	L Bracket Kit	74601-01A		
1984-2017	All	All	Quick Latch Bracket Kit, Recommended For Tonneaus And Shells	74605-01A		
1982-2017	All	All	Tonneau Cover Spacer Kit	74609-01A		



BEDXTENDER HD™ MAX
IN BLACK

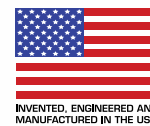

BEDXTENDER HD™ MAX
IN SILVER

BEDXTENDER HD™ SPORT


V-SHAPE DESIGN IS THE PERFECT MIX OF FORM AND FUNCTION THAT KEEPS YOUR GEAR SECURE.

Provides the extra clearance needed when used with some tonneau cover rails. Flip it out with the tailgate open to gain up to 2-feet of enclosed cargo area. Flip it inside and close the tailgate to keep tools and smaller cargo contained in the truck bed.



- Tapered V-shape design
- Rounded-rectangle, 6063 T6 aluminum alloy tubes
- Torque-resistant clam-shell design composite uprights
- 3-year/36,000 mile warranty

- Durable silver or black powder-coated finish
- Easy assembly and installation

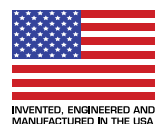

BEDXTENDER HD™ SPORT						
Years	Make	Model	Sub Detail	Notes	Silver Part #	Black Part #
1988-1999	Chevrolet	CK	Stepside		74802-00A	74802-001A
2004-2012	Chevrolet	Colorado			74802-00A	74802-001A
1996-2004	Chevrolet	S-10	Stepside	Requires Part # 74601-01 For Installation	74802-00A	74802-001A
2007-2017	Chevrolet	Silverado			74805-00A	74805-01A
1988-2000	Chevrolet	CK	Standard Bed		74804-00A	74804-001A
2015-2017	Chevrolet	Colorado			74816-00A	74816-01A
1996-2004	Chevrolet	S-10	Standard Bed	Requires Part # 74601-01 For Installation	74801-00A	74801-001A
2001-2007	Chevrolet	Silverado	Standard Bed		74804-00A	74804-001A
1999-2004	Chevrolet	Silverado	Stepside	2007-2012 Requires GM Mounting Kit Part # 74606-01A	74802-00A	74802-001A
1987-2011	Dodge	Dakota			74802-00A	74802-001A
1982-2017	Dodge	Ram	Standard Bed		74804-00A	74804-001A
1981-1993	Dodge	Ram	Stepside		74802-00A	74802-001A
2004-2017	Ford	F-150		Excludes Heritage/Stepside/Flareside Excludes Models Equipped With Ford's Integrated Tailgate Step, Optional No-Drill Bracket Available - Part # 74602-01A	74803-00A	74803-001A
1997-2009	Ford	F-150	Flareside		74802-00A	74802-001A
1997-2004	Ford	F-150	Standard Bed	Ford F-150 - 1997-'03 F-150 - Hertige Edition 2004	74804-00A	74804-001A
2008-2017	Ford	F-250/350	Standard Bed	Excludes Models Equiped With Ford Integrated Tailgate Step	74804-00A	74804-001A
1999-2007	Ford	F-250/350	Standard Bed		74804-00A	74804-001A
1982-2012	Ford	Ranger			74802-00A	74802-001A
1988-1999	GMC	CK	Stepside		74802-00A	74802-001A
2015-2017	GMC	Canyon			74816-00A	74816-001A
2004-2012	GMC	Canyon			74802-00A	74802-001A
1988-2000	GMC	CK	Standard Bed		74804-00A	74804-001A
2007-2017	GMC	Sierra			74805-00A	74805-001A
2001-2007	GMC	Sierra	Standard Bed		74804-00A	74804-001A
1999-2004	GMC	Sierra	Stepside	2007-2012 Requires GM Mounting Kit Part # 74606-01A	74802-00A	74802-001A
1996-2004	GMC	Sonoma	Standard Bed	Requires Part # 74601-01 For Installation	74801-00A	74801-001A
1996-2004	GMC	Sonoma	Stepside	Requires Part # 74601-01 For Installation	74802-00A	74802-001A
2004-2014	Isuzu	D-Max			74802-00A	74802-001A
1996-2000	Isuzu	Hombre			74801-00A	74801-001A
2005-2008	Lincoln	Mark LT		Optional No-Drill Bracket Available - Part # 74602-01A	74803-00A	74803-001A
1998-2006	Mazda	B-Series		Requires Part # 74601-01 For Installation	74801-00A	74801-001A
2007-2009	Mitsubishi	Raider	Standard Bed		74801-00A	74801-001A
1998-2017	Nissan	Frontier		Requires Part # 74601-01 For Installation	74801-00A	74801-001A
2004-2017	Nissan	Titan	Standard Bed		74804-00A	74804-001A
2005-2014	Toyota	Hilux			74821-00A	74821-001A
1984-1994	Toyota	Pickup		Requires Part # 74601-01 For Installation	74802-00A	74802-001A
2016-2017	Toyota	Tacoma			74802-00A	74802-001A
2007-2017	Toyota	Tundra			74803-00A	74803-001A
2000-2006	Toyota	Tundra			74804-00A	74804-001A
1995-2015	Toyota	Tacoma		1995-2004 Models Require Part # 74601-01A Bracket	74801-00A	74801-001A

EXTRAS AND OPTIONS				
Years	Make	Model	Notes	Part #
2004-2017	Ford	F-150	No Drill Bracket - Mounting Kit (Optional Upgrade)	74602-01A
2008-2017	Ford	F-250/350	No Drill Bracket - Mounting Kit (Optional Upgrade)	74602-01A
2007-2017	GMC	Sierra	Mounting Bracket	74606-01A
2005-2017	Nissan	Frontier	Latch Kit (Screw And Barrel Only)	74607-01A
1998-2017	Nissan	Frontier	L Bracket Kit	74601-01A
2014-2014	Ram	Dually	Bracket Kit	74610-01A
1984-2004	Toyota	All	L Bracket Kit	74601-01A
1993-1998	Toyota	T-100	L Bracket Kit	74601-01A
1984-2017	All	All	Quick Latch Bracket Kit, Recommended For Tonneaus And Shells	74605-01A
1982-2017	All	All	Tonneau Cover Spacer Kit	74609-01A

BEDXTENDER HD™ MOTO

SLANT-BACK DESIGN LETS YOU HAUL EVEN MORE.

Gives smaller pickups the extra enclosed space needed to secure full-size motorcycles, bikes or any extra-long cargo that you need to haul with the tailgate open. From hay bales to Hondas, it's there when you need it. And when you don't, it flips forward to keep your smaller cargo safe and organized in the truck bed.



- Patented slant-back design
- Rounded-rectangle, 6063 T6 aluminum alloy tubes
- Torque-resistant clam-shell design composite uprights


- 3-year/36,000 mile warranty
- Durable silver or black powder-coated finish
- Easy assembly and installation

BEDXTENDER HD™ MOTO						
Years	Make	Model	Sub Detail	Notes	Silver Part #	Black Part #
2004-2012	Chevrolet	Colorado	Standard Bed		74809-00A	74809-001A
1996-2004	Chevrolet	S-Series	Standard Bed	Requires Part # 74601-01A For Installation	74809-00A	74809-001A
1987-2011	Dodge	Dakota	Standard Bed		74809-00A	74809-001A
2004-2012	GMC	Canyon	Standard Bed		74809-00A	74809-001A
1996-2004	GMC	Sonoma	Standard Bed	Requires Part # 74601-01A For Installation	74809-00A	74809-001A
1996-2000	Isuzu	Hombre			74809-00A	74809-001A
1998-2006	Mazda	B-Series		Requires Part # 74601-01A For Installation	74809-00A	74809-001A
2007-2009	Mitsubishi	Raider	Standard Bed		74809-00A	74809-001A
1998-2017	Nissan	Frontier		Requires Part # 74601-01A For Installation	74809-00A	74809-001A
1985-1997	Nissan	Frontier		Requires Part # 74601-01A For Installation	74809-00A	74809-001A
1993-1998	Toyota	T-100		Requires Part # 74601-01A For Installation	74809-00A	74809-001A
2005-2015	Toyota	Tacoma			74809-00A	74809-001A
1995-2004	Toyota	Tacoma		Requires Part # 74601-01A For Installation	74809-00A	74809-001A
2000-2006	Toyota	Tundra			74809-00A	74809-001A

EXTRAS AND OPTIONS					
Years	Make	Model	Notes	Part #	
1998-2017	Nissan	Frontier	L Bracket Kit	74601-01A	
1984-2004	Toyota	All	L Bracket Kit	74601-01A	
1993-1998	Toyota	T-100	L Bracket Kit	74601-01A	
1984-2017	All	All	Quick Latch Bracket Kit, Recommended For Tonneaus And Shells	74605-01A	
1982-2017	All	All	Tonneau Cover Spacer Kit	74609-01A	



BEDXTENDER HD™ MOTO
IN BLACK

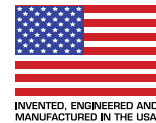


BEDXTENDER HD™ MOTO
IN SILVER



FLIP DOWN WITH A SIMPLE
NUDGE OF THE FOOT



BEDSTEP®

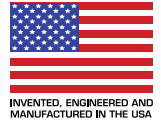

GO AHEAD AND STEP ON IT. BEDSTEP® IS A REAL TIME SAVER.

Not to mention knee and back saver. Strong and rugged, this non-slip, retractable bumper step quickly flips down with the nudge of a foot providing a faster, easier and safer way to load or unload your pickup's cargo. Supports up to 300 lbs. Frame-mounts, under the rear bumper so it works even with an open tailgate or when towing.

- Engineered to support loads up to 300 lbs
- High-strength aluminum alloy components
- Precision stainless-steel pivot pins for rock-solid stability
- Maintenance-free, self lubricating bushings for all-weather performance
- 3-year/36,000 mile warranty




BEDSTEP®				
Years	Make	Model	Notes	Part #
2014-2017	Chevrolet	Silverado 1500		75314-01A
2007-2013	Chevrolet	Silverado 1500	Excludes '07 Classic & Flairside	75300-01A
2015-2017	Chevrolet	Silverado 2500/3500		75315-01A
2011-2014	Chevrolet	Silverado 2500/3500		75308-01A
2007-2013	Chevrolet	Silverado 2500/3500	Excludes '07 Classic & Flairside	75300-01A
1999-2006	Chevrolet	Silverado 1500/2500/3500	Includes '07 Classic, Excludes Flairside	75301-01A
2009-2017	Dodge	Ram 1500	Not Compatible With Dual Exhaust Or Diesel Models	75306-01A
2009-2017	Dodge	Ram 1500	Dual Exhaust Compatible	75310-01A
2002-2008	Dodge	Ram 1500		75304-01A
2010-2017	Dodge	Ram 2500/3500	Not Compatible With Dual Exhaust	75306-01A
2003-2009	Dodge	Ram 2500/3500		75304-01A
2015-2017	Ford	F-150		75312-01A
2006-2014	Ford	F-150	Excludes Flairside, Not Compatible With Some 04/05 Models	75302-01A
2017-2017	Ford	F-250/350/450		75313-01A
1999-2016	Ford	F-250/350/450		75303-01A
2014-2017	GMC	Sierra 1500		75314-01A
2007-2013	GMC	Sierra 1500	Excludes '07 Classic & Flairside	75300-01A
1999-2006	GMC	Sierra 1500/2500/3500	Includes '07 Classic, Excludes Flairside	75301-01A
2015-2017	GMC	Sierra 2500/3500		75315-01A
2011-2014	GMC	Sierra 2500/3500		75308-01A
2007-2013	GMC	Sierra 2500/3500	Excludes '07 Classic & Flairside	75300-01A
2007-2017	Jeep	Wrangler JK	Compatible With Some Factory Bumpers And Aftermarket Bumpers	75311-01A
2016-2017	Toyota	Tacoma		75317-01A
2005-2015	Toyota	Tacoma		75307-01A
2016-2017	Toyota	Tundra		75316-01A
2014-2015	Toyota	Tundra		75309-01A
2007-2013	Toyota	Tundra		75305-01A
2016-2017	Toyota	Tacoma		75317-01A

BEDSTEP® 2

SIDE STEPS FOR HARD-WORKING TRUCKS

The AMP Research **BEDSTEP® 2** mounts just behind the cab, forward of the rear wheel, providing a faster, easier and safer route to access toolboxes, equipment and cargo in the bed. Easily installed, this frame-mounted, retractable truck step can be mounted on either side of the truck box, and it flips down or retracts with just the nudge of your foot.

- Side-mounted bed access step
- Engineered to support loads up to 300 lbs
- High-strength aluminum alloy components
- Precision stainless-steel pivot pins for rock-solid stability
- Maintenance-free, self-lubricating bushings for all-weather performance
- 3-year/36,000 mile warranty

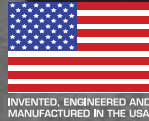

FLIP DOWN WITH A SIMPLE
NUDGE OF THE FOOT



BEDSTEP® 2					
Years	Make	Model	Sub Detail	Notes	Part #
2014-2017	Chevrolet	Silverado	All Beds		75407-01A
1999-2013	Chevrolet	Silverado	All Beds	Dually Requires Part # 75610-01A For Installation	75400-01A
2009-2017	Dodge	Ram 1500		Dually Requires Part # 75611-01A For Installation	75406-01A
2002-2008	Dodge	Ram 1500			75404-01A
2014-2017	Dodge	Ram 2500/3500		Excludes Dually	75411-01A
2010-2017	Dodge	Ram 2500/3500	Mega Cab	Dually Requires Part # 75611-01A For Installation	75406-01A
2003-2009	Dodge	Ram 2500/3500			75404-01A
2014-2017	Dodge	Ram 3500		Dually 8' Bed	75410-01A
2015-2017	Ford	F-150		Fits 5.5' Bed Only	75412-01A
2015-2017	Ford	F-150		Fits 6.5' Bed - Requires Installation Kit Part # 10-79512-01	75412-01A
2009-2014	Ford	F-150	All Beds		75402-01A
2017-2017	Ford	F-250/350			75413-01A
1999-2016	Ford	F-250/350	All Beds		75403-01A
1999-2016	Ford	F-450/550	All Beds		75403-01A
2014-2017	GMC	Sierra	All Beds		75407-01A
1999-2013	GMC	Sierra	All Beds	Dually Requires Part # 75610-01A For Installation	75400-01A
2007-2017	Toyota	Tundra	Crewmax		75405-01A
2007-2017	Toyota	Tundra	Standard Cab		75409-01A
2007-2017	Toyota	Tundra	Double Cab		75409-01A

EXTRAS AND OPTIONS					
Years	Make	Model	Sub Detail	Notes	Part #
2007-2013	Chevrolet	Silverado	Dually	Dually Kit	75610-01A
2007-2013	GMC	Sierra	Dually	Dually Kit	75610-01A
2002-2017	Dodge	Ram 1500/2500/3500		Dually Kit - Not Required For Mega Cab Dually	75611-01A
2015-2017	Ford	F-150		6.5' Bed Ford F-150 2015 Only	10-79412-01A

NOMENCLATURE GUIDE

Vehicle manufacturers refer to their cab styles and bed lengths in multiple ways, adding complexity when identifying compatible products. This guide was created to help you compare how each brand describes these vehicle components to their Automotive Aftermarket Industry Association (AAIA) standardized name, making it easy to find a compatible part for your vehicle.

CAB STYLES			
Make	Brand Name	AAIA Name	Description
Chevrolet/ GMC	Regular Cab	2-door Standard Cab	2 Full-Size Doors
	Extended Cab	4-door Extended Cab	2 Full-Size Doors, 2 Half-Size Doors
	Crew Cab	4-door Crew Cab	4 Full-Size Doors
Dodge/ Ram	Regular Cab	2-door Standard Cab	2 Full-Size Doors
	Quad Cab	4-door Extended Cab	2 Full-Size Doors, 2 Half-Size Doors
	Crew Cab	4-door Crew Cab	4 Full-Size Doors
	Mega Cab	4-door Extended Crew Cab	4 Full-Size Doors with seat storage
Ford	Regular Cab	2-door Standard Cab	2 Full-Size Doors
	SuperCab	3-door or 4-door Extended Cab	2 Full-Size Doors, 1 or 2 Half-Size Doors
	SuperCrew	4-door Crew Cab	4 Full-Size Doors
Nissan	Regular Cab	2-door Standard Cab	2 Full-Size Doors
	King Cab	4-door Extended Cab	2 Full-Size Doors, 2 Half-Size Doors
	Crew Cab	4-door Crew Cab	4 Full-Size Doors
Toyota	Regular Cab	2-door Standard Cab	2 Full-Size Doors
	Access Cab	4-door Extended Cab	2 Full-Size Doors, 2 Half-Size Doors
	Double Cab	4-door Crew Cab	2 Full-Size Doors, 2 ³ / ₄ -Size Doors
	CrewMax Cab	4-door Extended Crew Cab	4 Full-Size Doors

BED LENGTH		
Make	Brand Name	AAIA Name
Chevrolet/ GMC	Short Box	Fleetside 68.4 in
	Standard Box	Fleetside 78.0 in
	Long Box	Fleetside 96.0 in
Dodge/ Ram	Short Box	Fleetside 67.4 in
	Mid Box	Fleetside 76.3 in
	Long Box	Fleetside 96.3 in
Ford	5.5 ft. Styleside	Styleside 66.0 in
	6.5 ft. Styleside	Styleside 78.0 in
	8.0 ft. Styleside	Styleside 96.0 in
Toyota	Short Bed	Fleetside 66.7 in
	Standard Bed	Fleetside 78.7 in
	Long Bed	Fleetside 97.6 in


NOTE:

Bed lengths vary by year, make and model of vehicle. The dimensions provided above are for example only, not intended for part-specific fitsments.

MEASURING BED LENGTH

All the products we sell are custom-made to fit your truck. Bed length is often a key indicator for compatibility.

TO DETERMINE BED LENGTH, measure from the inside of the tailgate to the inside of the bulkhead (see image).

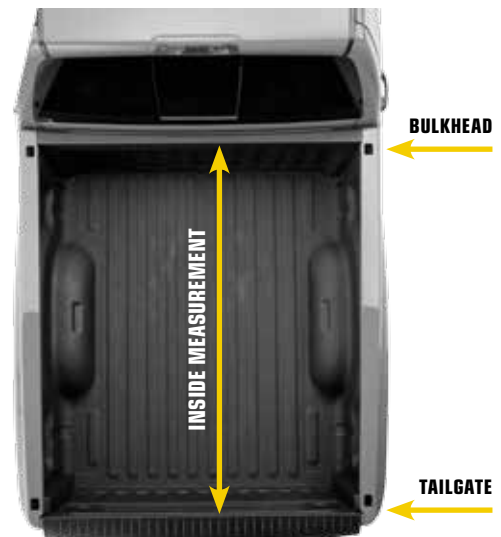

CHEVROLET GMC *Silverado shown*



Regular Cab Extended Cab (Pre-2014) Double Cab (2014+) Crew Cab

DODGE RAM *1500 shown*



Regular Cab Quad Cab Crew Cab Mega Cab

FORD *F-150 shown*



Regular Cab Super Cab Super Crew

NISSAN *Titan shown*



Regular Cab King Cab Crew Cab

TOYOTA *Tundra shown*




Regular Cab Access Cab (Tacoma) Double Cab CrewMax Cab

AMP RESEARCH® TUSTIN, CA

The inventor of the electric running board and bed extender categories, AMP Research® is a U.S. manufacturer of aftermarket and OEM automotive accessories for Trucks, Jeeps, SUVs, and Vans. The company specializes in quality products utilizing ISO/TS standards with on-site design and tooling resources.

The company's motto, **"INNOVATION IN MOTION"** captures the groundbreaking mix of breakthrough products the company has brought to the market.

amp-research.com

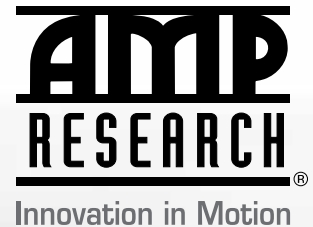


AMP-RESEARCH, a division of Lund International.






888.983.2204
AMP-RESEARCH.COM

Customer Service/Technical Support
888.983.2204
Monday - Friday, 6:00 am - 5:00 pm Pacific
customerservice@AMP-Research.com
15651 Mosher Avenue, Tustin, CA 92780

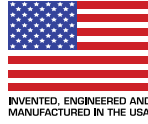

**POWERSTEP™
OVERRIDE SWITCH**

POWERSTEP™ XTREME

-  facebook.com/ampresearch
-  twitter.com/ampresearch
-  youtube.com/ampresearchtv
-  instagram.com/ampresearch

Printed in the USA. All content, including images,
Copyright © 2017 Lund International.

Part # AMPAPPGUIDE2017
Updated 01/2017



AMPAPPGUIDE2017